

BERGES

Operating Instructions

**Serial Input/Output Converter
SIOC03**



Table of Contents

1	Introduction	2
1.1	Product Overview	2
1.2	Manual Overview	2
2	Receiving and Installation	2
2.1	Initial Inspection	2
2.2	Product Features & Specifications	2
3	Connections	3
3.1	Introduction	3
3.2	General Wiring Information	3
3.2.1	Wiring Practices	3
3.2.2	Considerations for Control Wiring	3
3.2.3	RS232 Communication Cable	3
3.3	Terminals Found on the SIOC03	3
3.3.1	Power Supply Connections	4
3.3.2	RS233 Input Connections	5
3.3.3	RS485 Output Connections	5
4	Configuration	6
4.1	Introduction	6
4.2	Gaining Access to the Configuration Jumpers	6
4.3	Power Supply Selection	6
4.4	Echoing	7
4.5	RS232 – RS485 Transmit Enable	7
4.6	Biasing an RS-485 Network	8
5	Operation	8
5.1	Introduction	8
5.2	Theory of Operation	8
6	Troubleshooting	9
6.1	Introduction	9
6.2	Troubleshooting Tips	9
6.3	Factory Assistance	10
7	Appendix	10
7.1	RS232 Connection Details	10

1 Introduction

1.1 Product Overview

The SIOC03 module is an optically isolated converter that converts RS232 to half duplexed RS485 signals and vice-versa. The converter performs all necessary level shifting required to interface these two different communication systems.

1.2 Manual Overview

This manual contains specifications, receiving and installation instructions, configuration, description of operation, and troubleshooting procedures for the SIOC03 Serial Input/Output Converter.

2 Receiving and Installation

2.1 Initial Inspection

The SIOC03 option contains an SIOC03 converter module, two sets of cables for connecting to the EF1, and a 24 VDC power supply. One of the cables is for reflashing the drive's firmware (marked WF2 Reflash and having an RJ45 connector); the other is for Modbus communications (marked WF2 Modbus.)

Carefully inspect the SIOC03 for shipping damage or missing components. Report any shipping damage to your nearest BERGES representative.

2.2 Product Features & Specifications

Power supply requirements	+5 VDC or +12–24 VDC; 50 mA
Module input	RS232 for PC or PLC, 9 pin "D" shell, female
Module output	RS485 half duplex, to terminal block
Maximum baud rate	110 k bits per second (bps)
Signal Isolation	Optical, 1,000 volts
Rectified power supply input	Power supply polarity makes no difference
Break apart terminal	Allows easy replacement, if needed
Ease of installation	Simple 2 wire half duplex requires a minimal number of electrical connections per device
Common protocols	Input RS232 is available on all PCs and many PLCs. Output RS485 is common in industrial applications, providing flexibility in selection of other system components
Jumper selectable echoing	Allows disabling of echo feature for compatibility with a greater number of devices and host software
LED diagnostics	PWR – power supply is OK. TE – transmit enable is active. TxD – data is present on the transmit line. RxD – data is present on the receive line.
Jumper selectable RS232 - RS 485 Transmit Enable Method	Allows selection between an Automatic Transmit Enable or an RTS/CTS Transmit Enable

3 Connections

3.1 Introduction

This chapter provides information on connecting the required wiring to the SIOC03 converter.

3.2 General Wiring Information

3.2.1 Wiring Practices

Good wiring practice requires separation of low voltage wiring from all power wiring. Power from inverters and other non-linear loads contain high frequencies that may interfere with other equipment. Do not run low voltage signal wires in the same conduit or raceway with power or motor wiring. Observe general RFI suppression measures (refer to the inverter manuals (electromagnetic compatibility)).

3.2.2 Considerations for Control Wiring

All wiring associated with the SIOC03 converter module is low voltage wiring. Many of the conductors carry high frequency signals that contain the communication signals. Select this low voltage wiring as follows:

1. Shielded wire is recommended to prevent electrical noise interference from causing improper operation or nuisance tripping. Connect the shield as recommended by the equipment manufacturer.
2. Twisted pairs are recommended. The SIO+ and SIO– conductors should be twisted together. If a twisted pair is used for the power supply connection, the positive voltage and common conductors should be twisted.
3. Use only VDE, UL or CUL recognized wire.
4. Wire voltage rating must be at least 300 volts.

3.2.3 RS232 Communication Cable

It may be desirable to extend the length of the 9 pin “D” shell connector. To do this requires a straight through cable assembly (i.e pin 1 connects to pin1; pin 2 to pin 2; etc.). Mouse extension cables may not perform correctly. To assure reliability, always keep the length of this connection as short as possible, with an absolute maximum of 25 feet. The cable should be kept clear of any power signals.

3.3 Terminals Found on the SIOC03

Figure 1 shows the power SIOC03 circuit board assembly. The Table 1 describes the terminals.

Terminal	Term	Description
1	PWR	Positive input terminal for the power supply.
2 & 4	SIO+	Positive side of the SIO data.
3 & 5	SIO-	Negative side of the SIO data.
6	COM	Circuit common for the power supply input.
J12		2 mm female power supply input.

Table 1
Description of Terminals

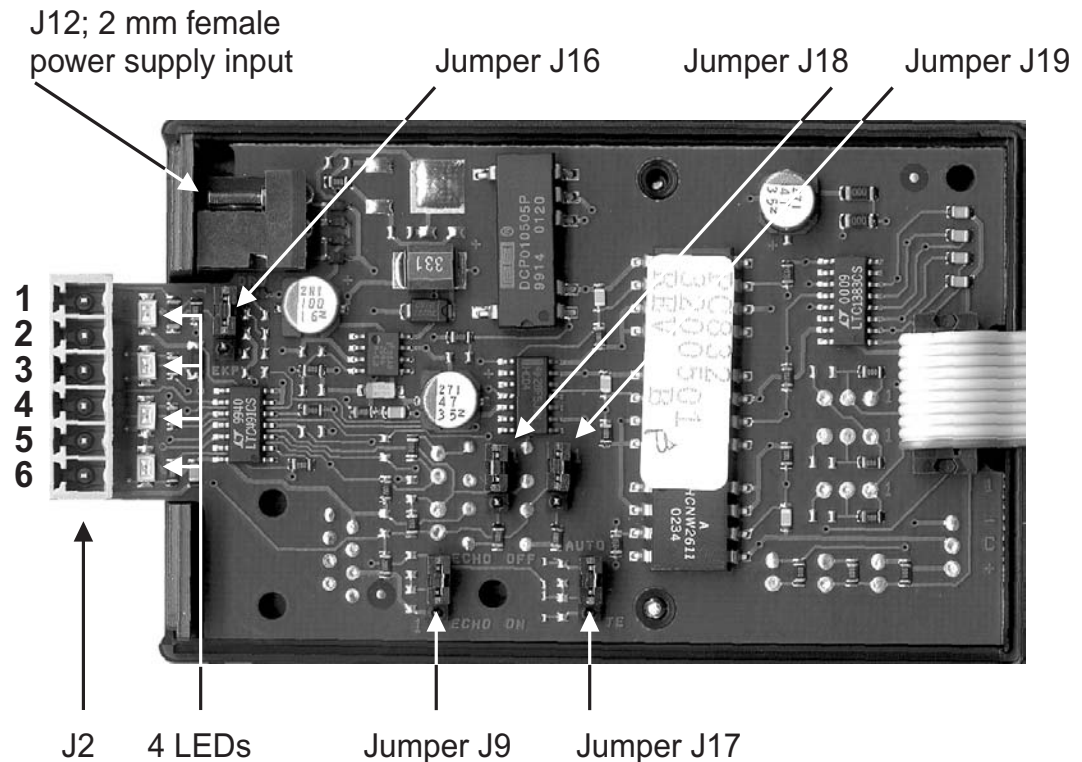


Figure 1
SIOC03 Component Location Diagram

3.3.1 Power Supply Connections

The SIOC03 converter module requires a DC power supply to operate. The voltage can be between +12 and +24 VDC.

When used with the “E-trAC WFC” or “WF2” series of drives, the +24 VDC can be taken from the drive's user power supply. In this case, the +24 and common terminals of any one drive in the system are connected to the V+ and COM terminals of the SIOC03. Do not, under any circumstances, connect the supply terminals of multiple devices to the SIOC03, or damage may result to those devices. Other external supplies can also be used, and are connected in the same manner.

The power supply requirement can also be met using a power supply adapter such as BERGES part number PA24DC. Such a device must be capable of supplying +24 VDC, and capable of supplying 50 mA of current. Power from these devices can be connected to the J12 connector of the SIOC03 module. See figure 1 for the location of this connector.

3.3.2 RS232 Input Connections

The SIOC03 module is provided with a 9 pin “D” shell connector for interface with a PC, PLC, or other RS232 communication host. Hardware is also provided for securing this connector to the host device. It is strongly suggested that the connector be secured using this hardware.

If the length of the cable is adequate, and the gender of the connector are correct, the cable can be plugged directly into the desired communications port (COM Port) of the host device.

It may be necessary to convert the gender of the 9 pin “D” shell connector. Adapters for this type of conversion are available from third party sources. Details of the signals connected to the various pins of this connector can be found in section 7.1.

If the communication host has a 25 pin “D” shell connector, an adapter can be made or purchased from a third party. Section 7.1 provides the connection information for such an adapter.

The length of the input cable assembly can be extended. To do this requires a straight through cable assembly (i.e pin 1 connects to pin 1; pin 2 to pin 2; etc.). Mouse extension cables may not perform correctly. To assure reliability, always keep the length of this connection as short as possible, with an absolute maximum of 25 feet. The cable should be kept clear of any power signals.

3.3.3 RS485 Output Connections

The RS485 output of the SIOC03 is terminated at COM, terminals SIO+ and SIO–. The proper connection of these terminals, when connected to BERGES inverter products, is shown in figure 2. Refer to the equipment manual for other devices that you may wish to connect to the same system for correct connection.

It is strongly recommended that these connections be made with a shielded twisted pair. The SIO+ and SIO– conductors are twisted. The shield is connected to the common of either the SIOC03 module or the device that it is communicating with; but not at both ends. The end not connected should be taped back to the jacket of the cable. This is the case for each connection, as shown in figure 2.

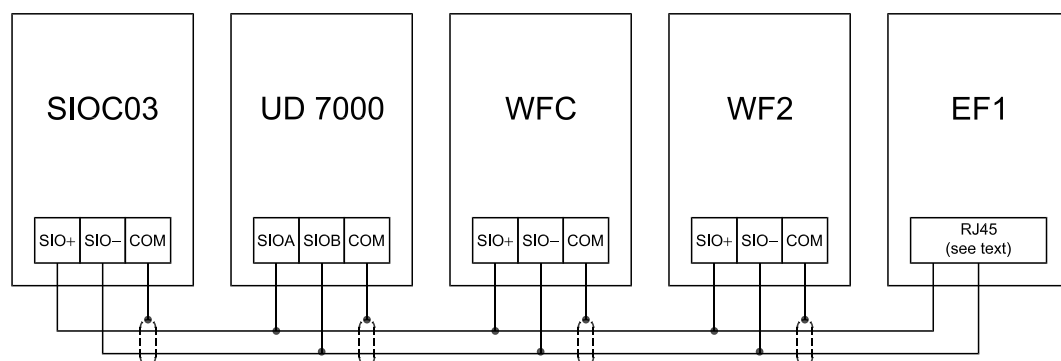


Figure 2
Typical RS485 Connections

4 Configuration

4.1 Introduction

This chapter provides information on setting the configuration jumpers in the SIOC03 module.

4.2 Gaining Access to the Configuration Jumpers

The case of the SIOC03 is removed by removing the two screws located on the bottom of the enclosure. See figure 3 for the location of these screws.

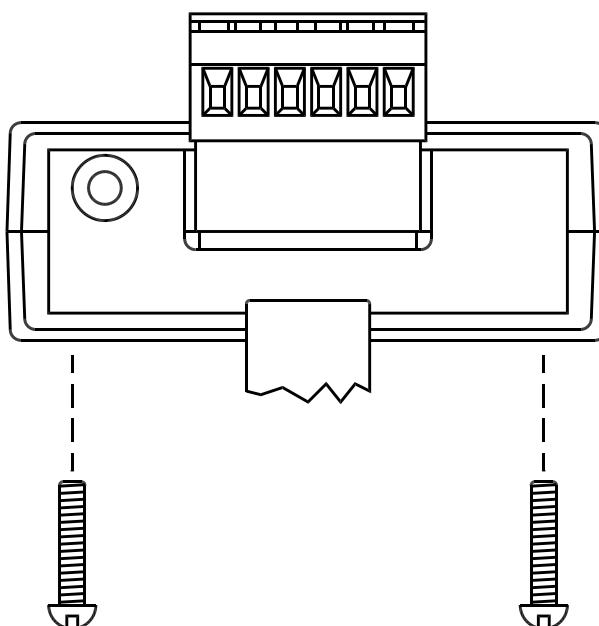


Figure 3
Enclosure Screw Location

When replacing the cover, assure that the ribbon cable for the RS232 connection is routed correctly and is not being pinched. The screws should not be tightened in excess of 6 in-lb, or damage may result to the enclosure.

4.3 Power Supply Selection

Jumper J16 configures the SIOC03 module to supply current from the PWR connection on jumper J2. This setting should only be used when connecting the SIOC03 to BERGES Enhanced Keypad. **Note that having the jumper configured to EKP with another product may cause damage to that product or the SIOC03.** The default setting for this jumper is DRV and should not be changed from this position unless an Enhanced Keypad (EKP) is being reflashed. Refer to Table 2 for the proper jumper placement. Figure 4 provides the location of the jumper.

Jumper J16	Label	Selection
1-2	DRV	No current source through J2-1
2-3	EKP	Current source through J2-1

Table 2
Power Supply Configuration

4.4 Echoing

Echoing can be enabled or disabled by selection jumper J9. The default setting for this jumper has echoing enabled. Table 3 shows the possible connections for this jumper. Figure 4 provides the location of the jumper.

Jumper J9	Selection
1-2	Echo On
2-3	Echo Off

Table 3
Echo Configuration

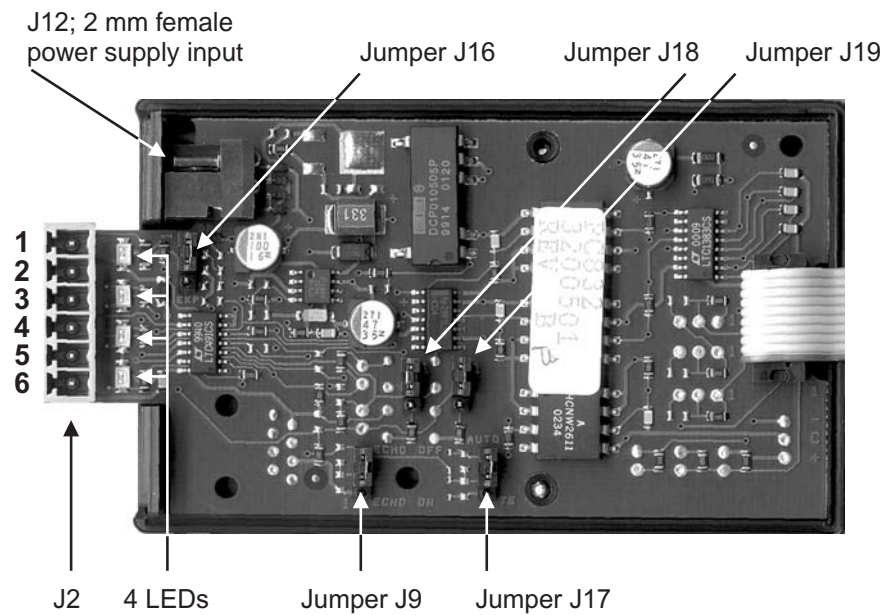


Figure 4
SIOC03 Component Location Diagram

4.5 RS232 – RS485 Transmit Enable

Jumper J17 configures the SIOC03 to use the RTS line as the transmit enable (TE) or to have an automatic transmit enable based on the state of the Txd line (AUTO.) The default setting for this jumper is AUTO. Refer to table 4 for the possible connections for this jumper. Figure 4 provides the location of the jumper.

Jumper J17	Label	Selection
1-2	TE	Transmit Enable by RTS
2-3	Auto	Automatic Transmit Enable

Table 4
Transmit Enable Configuration

4.6 Biasing an RS-485 Network

When an RS485 network is in an idle state (no communication is being transmitted or received), a proper idle voltage state of at least 200 mV must be maintained between the SIO+ and SIO– lines. The proper idle voltage state must be maintained by selecting the proper biasing resistors for the network. A 10k ohm pull-up resistor (R2) on the SIO+ line and a 10k ohm pull down resistor (R20) on the SIO– line do the SIOC03 biasing. When a terminating resistor is placed between the SIO+ and SIO– lines, however, 10k ohm resistors may not produce enough voltage difference between the SIO+ and SIO– lines to signal an idle state. As the voltage difference between SIO+ and SIO– increases, the probability of corrupt communication increases. The SIOC03 provides a method of reducing the biasing resistors to improve communications for the terminated, noisy, or multi-dropped network. Jumpers J18 and J19 place a 1k ohm resistor in parallel with the 10k ohm bias resistors dropping the biasing to 910 ohms. This will increase the voltage difference between the SIO+ and SIO– communication lines. Figure 4 shows the position of the jumpers when the extra resistance is not added. The SIOC03 also provides a place to add through hole resistors (R49, R50) in parallel to the biasing resistors so that the resistance can be dropped even further.

5 Operation

5.1 Introduction

This chapter provides information on the operation of the SIOC03 Serial Input/Output Converter.

5.2 Theory of Operation

The SIOC03 module provides a half-duplex (2-wire) RS485 multi-drop connection designed primarily for use with the BERGES inverter products. All drives on the common RS485 bus must have their circuit commons (COM or CM terminal) connected. The optical isolation of the SIOC03 provides an isolation barrier between the drives and the communication host. This isolation allows baud rates of up to 110 kHz.

When jumper J17 is configured to AUTO, the transmitter for the RS485 is enabled as long as no activity is detected on the Txd line of the RS232 device. When the SIOC03 detects the start character of a message it stops all RS485 transmissions so that the RS232 side can transmit. Because the SIOC03 must detect the activity of the RS232 device, the automatic mode is more susceptible to communication errors than the RTS transmit enable. This method of conversion, however, is less dependent on host software or operating system of the host device.

When jumper J17 is configured to TE, the transmitter for the RS485 is enabled when the RTS line is low. When the RTS line is high, data on the TxD line is reflected on the RS485 port. A high signal on the TxD line causes current to flow from SIO+ to SIO–. Data on the RS485 bus is always reflected on the RxD line, regardless of the RTS signal level. All TB Wood's PC software will work with RTS transmit enable on PCs with Windows 9x systems. For NT based systems, however, TB Wood's software will require jumper J17 to be configured to AUTO due to restrictions to COM port access in those operating systems.

Handshaking lines RTS and CTS are connected together internally in the SIOC03 module. No time delay is injected between asserting RTS and receiving CTS.

Handshaking lines DTR, DSR, and DSD are connected together internally in the SIOC03 module. No time delay is injected between asserting DTR and receiving DSR and DCD.

These handshaking connections are present for software or hardware that requires full handshaking. Use of BERGES software on most computers does not require the full handshaking, and operation may be accomplished by proper connection of only the GND, RTS, TxD and RxD signals.

Transmission of data is enabled by raising the RTS signal prior to sending data on the TxD line. The transmitter is enabled with 20 microseconds of the RTS assertion.

6 Troubleshooting

6.1 Introduction

This chapter provides information on using the LEDs incorporated into the design of the SIOC03 as troubleshooting aids.

6.2 Troubleshooting Tips

Table 5 presents a guide for troubleshooting a system based on the status LEDs in the system. The location of these LEDs, and their function, is shown in figure 1 and 5.

Symptom	Possible Cause	Potential Solution
PWR LED not lit	Correct power supply voltage is not present.	Check that the power supply is connected, and that it is working correctly. Check for excessive load on the power supply. Check that the power supply selection jumper in the SIOC2 is set correct for the voltage being applied.
TE LED not lit during transmit	TE command not given in source code.	Check that the TE command is being sent by the host.
TxD never comes on	No signal on the transmit line.	Check the RS232 connections (9 pin "D" shell connector). Assure that the host is putting information onto the transmit bus, and that the signal is reaching the module.
RxD never comes on	No signal on the receive line.	Check the RS485 connections to J2 and the devices connected to the bus.

Table 5
Troubleshooting Hints

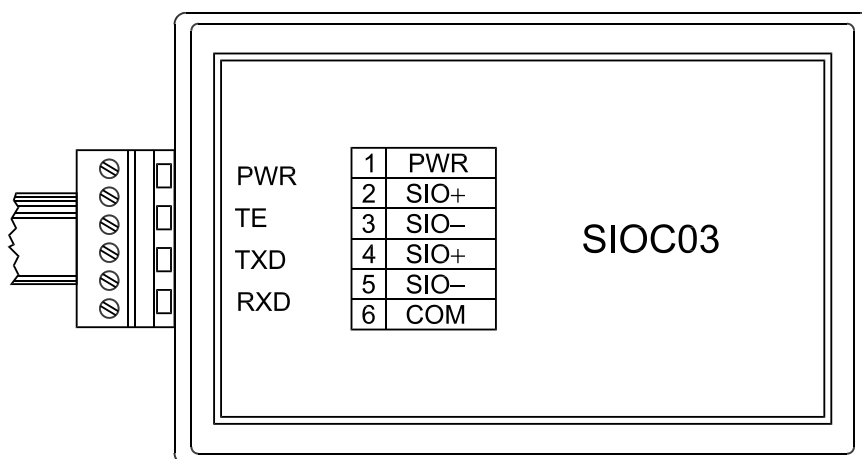



Figure 5
Location of Status LEDs

6.3 Factory Assistance

If you require further assistance with this or any BERGES Electrical product, please contact our Application Engineers can be reached at +49 2264 17-158 or +49 2264 17-160.

7 Appendix

7.1 RS232 Connection Details

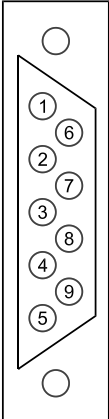	Pin Number	Signal Name
	1	DCD
	2	RxD
	3	TxD
	4	DTR
	5	GND
	6	DSR
	7	RTS
	8	CTS
	9	

9 Pin “D” Shell Connections, SIOC03 and Host

25 Pin D Shell Host	9 Pin RS232, SIOC03	Signal Name
2	3	TxD
3	2	RxD
4	7	RTS
5	8	CTS
6	6	DSR
7	5	GND
8	1	DCD
20	4	DTR

9 Pin to 25 Pin Serial Port Connections



BERGES

BERGES electronic GmbH
Industriestraße 13 • D-51709 Marienheide-Rodt
Postfach 1140 • D-51703 Marienheide
Tel. (0 22 64) 17-0 • Fax (0 22 64) 1 71 26
<http://www.berges.de> • e-mail: Info_BEL@berges.de

